

Technical Specifications





MOBOTIX MOVE NVR-16B (Mx-S-NVR1B-16-POE)

MOBOTIX MOVE Plug & Play NVR Series

The MOBOTIX MOVE NVR **Plug & Play** series has been exclusively designed to support the MOBOTIX MOVE IP Camera series with powerful recording by deep integration protocols out-of-the-box. Integrated 8 GB RAM support high Resolution Video Decoding and Recording on all supported video-input channels. The integrated 16-port PoE switch allows direct connection of IP cameras without extra power supply. It is equipped with M.2 (M-Key) and iSCSI communication interfaces for seamless adaptation to the requirements of the installation. The web management interface allows monitoring and configuring PoE power consumption, network connection quality and controlling the PoE power support of ONVIF S/T-conformant 3rd-party cameras. This provides extensive flexibility in mixed camera environments.

- 2MP Full HD up to 4K (12MP) IP camera support
- Native support of MOBOTIX MOVE, MOBOTIX IoT cameras and 3rd-party cameras via ONVIF protocol
- H.264/H.265 live video, recording and playback
- Integrated PoE switch with 16 ports for Plug & Play MOVE and 3rd-party camera integration
- Can handle additional 8 Plug & Play MOVE & 3rd party cameras via external switch
- Full HD local dual display/monitor output (HDMI/DisplayPort)
- Up to 2 x internal HDDs 3.5" SATA3 total 28TB (JBOD/Mirror)

MOBOTIX MOV®

Technical Specifications

MOBOTIX MOVE NVR-16B

- iOS & Android app support provides convenient mobile access to live and recorded video on the NVR
- Central Monitoring Software MOVE CMS for central view and playback of distributed Multi-Site NVR Systems
- Alarm I/O connectors (4 relay outputs, 4 signal inputs, 1 RS485 D+, 1 RS485 D- ports; implemented serial number RD20C00201 and higher)
- Integrated /in MOBOTIX HUB as a decentralized / remote-controlled recording and display device.

Product Information

Product Name	MOVE NVR-16B
Order Code	Mx-S-NVR1B-16-POE

System

Operating System Embedded Linux	
CPU	Intel Apollo Lake J3455
RAM	8 GB, LPDDR4
Boot Drive	16 GB eMMC Flash
Graphics	Intel HD Graphics 500
DISPLAY PORT Output	1920x1080@60Hz (Full HD)
HDMI Output	1920x1080@60Hz (Full HD)
Audio Input	3.5 mm TRS phone jack
Audio Output	3.5 mm TRS phone jack
USB Ports	USB 2.0 x2 (front); USB 3.0 x2 (rear)

Recording/Playback

IPCAM Throughput	Average: 200 Mbps Peak: 240 Mbps
GPU Hardware Decoding	24 CH real-time display, up to 720 fps@D1 decoding 10 CH real-time display, up to 300fps@1080p decoding
Compression Format	H.264/H.265

Storage & I/O

Digital Input	Input level 24V (H: V _{in} ≧ 2.4V, L: V _{in} ≦ 1.6V) 4 x Terminal Block
Digital Output	24V, 1A, Relay NC 4 x Terminal Block
Build-in SATA Interface	3.5" SATA3 x2
Max. HDD storage support (internal & ext. iSCSI)	28 TB
Redundancy	Failover: N + M (include fallback) supported with alternative firmware

Onboard Hardware Interface

M	1.2 (M-Key)	Yes	

Network

WAN Uplink	RJ-45 x1, 10/100/1000 Mbps
LAN Uplink	RJ-45 x1, 10/100/1000 Mbps
LAN ports with PoE	RJ-45 x16, 10/100Mbps
PoE Level	IEEE 802.3 af/at x16
PoE & switch management	Linux SDK
Supported protocols	User Authentication, IEEE 802.1x, IPv4, TCP, UDP, DHCP, SMTP, RTP, RTSP, HTTP, NTP, DDNS, iSCSI

General

Unit Dimensions (mm)	280 x 300 x 44
Unit Weight (kg)	2.5
Package Dimensions (mm)	495 x 345 x 181
Package Weight (kg)	8.5
Operating Temperature	0 to 40 °C/32 to 104 °F
Operating Relative Humidity	10 to 90 % non-condensing
System Power Supply	AC 100 to 240 V, 200 W, 56 V/3.57 A
PoE Budget per Port	30 W
Total PoE Budget	140 W

Accessories

19" Rack Mounting Kit	Available as optional accessory Mx-M-NVR16-RM for
	devices with serial number RD20600301 or higher.

List of Tested Hard Disks


NOTE! To ensure long-term reliable operation, make sure that you are using **server-grade hard disks** from the manufacturers' series listed below.

Brand	Series	Model Number	Capacity
Seagate	Skyhawk	ST1000VX005	1 TB
		ST2000VX008	2 TB
		ST2000VX015	2 TB
		ST3000VX009	3 TB
		ST4000VX007	4 TB
		ST4000VX013	4 TB
		ST6000VX001	6 TB
		ST8000VX004	8TB
	SkyHawk Al	ST8000VE000	8 TB
		ST10000VE001	10 TB
		ST14000VE0008	14 TB
		ST16000VE000	16 TB
		ST18000VE002	18 TB
	Ironwolf	ST12000VN0008	12 TB
	Ironwolf Pro	ST16000NE000	16 TB

Brand	Series	Model Number	Capacity
Western Digital	Purple	WD10PURZ	1 TB

Brand	Series	Model Number	Capacity
		WD20PURZ	2 TB
		WD22PURZ	2 TB
		WD23PURZ	2 TB
		WD30PURZ	3 TB
		WD40PURZ	4 TB
		WD43PURZ	4 TB
		WD60PURZ	6 TB
		WD62PURZ	6 TB
		WD64PURZ	6 TB
		WD82PURZ	8 TB
		WD84PURZ	8 TB
		WD85PURZ	8 TB
		WD102PURZ	10 TB
		WD121PURZ	12 TB
		WD140PURZ	14 TB
		WD180EJRX	18 TB
	Purple pro	WD8001PURP	8 TB
		WD101PURP*	10 TB
	Red Plus Pro	Overwrite speed not fast e	nough
	Gold (Ultrastar)	WD1005FBYZ	1 TB
		WD2005FBYZ	2 TB
		WD4003FRYZ	4 TB
		WD6003FRYZ	6 TB
		WD8003FRYZ	8 TB
		WD102KRYZ	10 TB
		WD121KRYZ	12 TB
		WD141KRYZ	14 TB
		WD161KRYZ	16 TB
		WD181KRYZ	18 TB
		WUH721818ALE6L4	18 TB


Front Panel

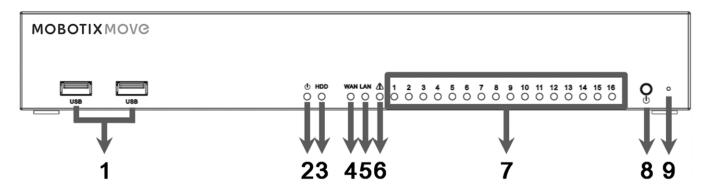

Item	Name	Description
1	USB 2.0 Port x2	USB ports allow users to connect external USB devices, such as a USB mouse, a USB keyboard, a USB storage device, etc.
2	Power LED	Lights up when the power is on.
3	HDD LED	Flashing: The HDD is reading/writing data.OFF: The HDD is not running.
4	WAN LED	■ Orange: Network speed is 1000Mbps.
5	LAN LED	■ Green: Network speed is 10/100Mbps.
6	P. Max	Lights up when there are 10 watts left to reach the power budget of PoE switch.
7	Camera LED	Lights up when the camera is powered up and has good network connection. Lights up in Green when the power source is from NVR. Lights up in Orange when the camera is powered by external power supply.
8	Power Button	Press to power on the NVR system.
9	Reboot Button	To reboot the NVR system, use a proper tool for pressing the Reboot button, then proceed as follows:

Item	Name	Description			
		Press and hold the Reboot button at least 5 seconds.			

Rear Panel

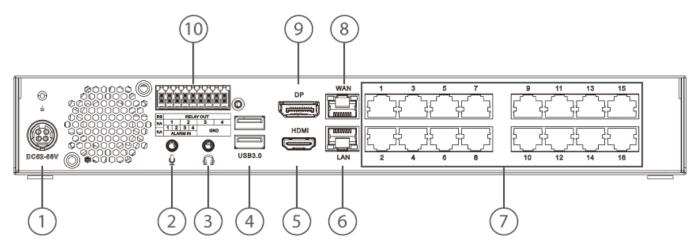


Item	Name	Description Connect the power adapter and the power cord shipped with the NVR to power on the NVR system. Use other power supply may cause overloading.				
1	Power Jack (DC 52 – 56 V)					
2	Mic In	A 2 E mm phono jock is provided to input/output andia				
3	Audio Out	A 3.5 mm phone jack is provided to input/output audio.				
4	USB 3.0 Port x2	The USB ports allow users to connect external USB devices, such as a USB mouse, a USB keyboard, a USB storage device, etc.				
5	HDMI Monitor	For connecting a monitor using its HDMI connector.				
6	LAN (RJ-45) 10/100/1000 Mbps	 The NVR is capable of connecting the Smart PoE Switch via LAN port. Green LED: Flashes when data is being transmitted via network. Orange LED: Lights up in green when network speed is 10/100 Mbps. Lights up in orange when network speed is 1000 Mbps. 				
7	PoE Switch	Provides network connectivity and power supply for up to 16 IP cameras.				
8	WAN (RJ-45) 10/100/1000 Mbps	This port is for connecting to the Internet (i.e., DSL router). • Green LED: Flashes when data is being transmitted via network.				

Item	Name	Description				
		■ Orange LED:				
		 Lights up in green when network speed is 10/100 Mbps. 				
		 Lights up in orange when network speed is 1000 Mbps 				
9	DisplayPort	For connecting a monitor using its DisplayPort connector.				
10	Alarm I/O Con- nectors	For connecting other devices to the NVR (see pin definition below).				

Alarm I/O Connectors

NOTE! These connectors are available on MOVE NVR-16B devices with a serial number of RD20C00201 and higher.

Pin Definition of Alarm I/O

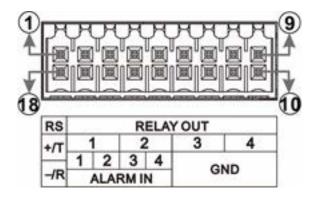

Pin	Definition	Pin	Definition	Pin	Definition	Pin	Definition
1	RS485 D+	6	-Relay Out 3	10	GND 1	14	Alarm In 4
2	Relay Out 1	7		11	GND 2	15	Alarm In 3
3		8	-Relay Out 4	12	GND 3	16	Alarm In 2
4	Relay Out 2	9		13	GND 4	17	Alarm In 1
5						18	RS485 D-

